INSTALLATION INSTRUCTIONS

CE 0088

for the

Concept LR Mounted Asepsis 21™ Delivery Unit

SECTION I - REQUIREMENTS

1. PHYSICAL REQUIREMENTS 1
2. ELECTRICAL REQUIREMENTS 1
3. WATER SUPPLY REQUIREMENTS 1
4. AIR SUPPLY REQUIREMENTS 1

SECTION II - INSTALLATION

1. UNPACKING THE CARTONS 2
2. UTILITIES CONNECTION BOX (J BOX) INSTALLATION 2
3. ELECTRICAL CONNECTIONS TO THE CONNECTION BOX (J BOX) 2
4. INSTALLING THE UNIT 4
5. UMBILICAL TUBING CONNECTIONS NON-ROTATION CHAIR (INTERNAL UMBILICAL) 6
6. UMBILICAL TUBING CONNECTIONS ROTATING CHAIR (EXTERNAL UMBILICAL) 7
7. INSTALLING THE STOP ROTATION PIN 8
8. PREPARING THE FLEX ARM 8
9. UMBILICAL TUBING CONNECTIONS TO THE UTILITIES CONNECTION BOX (J BOX) 9

SECTION III - CONTROLS

1. ASEPSIS 21 HANDPIECE DELIVERY SYSTEM CONTROLS 10
2. EXTERNAL CONTROLS AND FUNCTIONS 11

SECTION IV - PURGING AND TESTING THE SYSTEM

PURGING AND TESTING THE SYSTEM 12

SECTION V - FINAL CHECK LIST

FINAL CHECK LIST 12

003-1213-00 Rev. B

© Midmark Corporation 2001 SF-1789

Return To Table Of Contents

Owner's Product Identification

(Information that you will need to provide for servicing - key information is highlighted)

Date of Purchase	***Serial Number***
Name of Owner / Facility / Department	***Model Number***
Name of Authorized Knight Dealer	Telephone # of Authorized Knight Dealer
Address of Authorized Knight Dealer	

IMPORTANT INFORMATION

Intended Use of Product

This product is intended to be used as a delivery system for doctor and assistant instrumentation during general dentistry examinations and procedures conducted by qualified dental professionals.

Authorized CE Representative

For countries in the CE union, any questions, incidents, or complaints must be directed to Midmark's Authorized CE representative listed below:

Promotal
22, Rue de St. Denis
53500 Ernee
France

Phone: 33-2-430-517-76
Fax: 33-2-430-569-10

Transportation / Storage Conditions

- Ambient Temperature Range ..... -22° to 140° F (-30° to 60°C)
- Relative Humidity ..... 10% to 90% (non-condensing)
- Atmospheric Pressure ..... 500hPa to 1060hPa (0.49atm to 1.05atm)

INSTALLATION INSTRUCTIONS for the *Concept LR Mounted Asepsis 21™ Delivery Unit*

SECTION I - REQUIREMENTS

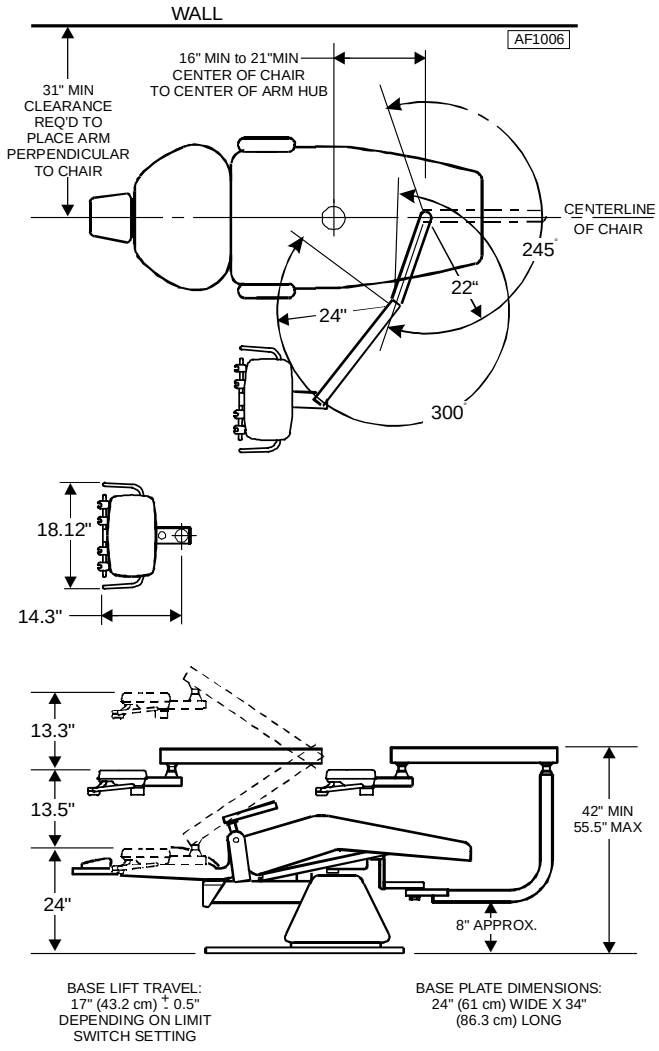

Figure 1

1. PHYSICAL REQUIREMENTS

Before installing, ensure that the physical requirements of the unit are met (See Figure 1).

2. ELECTRICAL REQUIREMENTS

Before connecting to the electrical supply, make certain that the circuit is protected by a 15-amp circuit breaker for 120-VAC models, or a 7.5-amp breaker for 240-VAC models. Ensure that all wiring is grounded and all electrical codes are observed.

WARNING - Potential shock hazard with possible personal injury. To reduce shock hazard, observe all electrical codes.

3. WATER SUPPLY REQUIREMENTS

A 1/2" pipe terminating with 1/2"NPT. Stub up 3/4" to 1" from the finished surface.

The static water pressure should be in the range of 30-50 psi. A suitable pressure reducing valve is essential for trouble free operation if the pressure exceeds the recommended range.

4. AIR SUPPLY REQUIREMENTS

A 1/2" pipe terminating with 1/2" NPT. Stub up 3/4" to 1" from the finished surface.

The static air pressure must be between 80-100 psi at the valve. A pressure reducer should be installed if the pressure exceeds 100 psi.

For maximum life and trouble free operation, the air supply must be clean and dry. It is recommended that a moisture separator and filter be installed as near the connection as possible and accessible for periodic cleaning.

© Midmark Corporation 2001 SF-1789

SECTION II - INSTALLATION

1. UNPACKING THE CARTONS

The Concept LR unit is shipped in a carton containing the following items:

- Asepsis 21 instrument head and arm
- Unit arm assembly
- Optional equipment
- Small parts box
- Utilities connection box (J box), and installation instructions
- Installation instructions (this manual), and operator's manual

Check for signs of damage to the carton or to the contents. Make sure all items listed above are present. If there is any evidence of damage due to shipping or if any of the items are missing from the carton, notify the shipper at once. Be careful not to discard any small parts or instruction sheets with the packing material.

2. UTILITIES CONNECTION BOX (J BOX) INSTALLATION

To install the J box, use the installation instructions supplied with the connection box. These contain important information needed for proper installation. They may also be used as a template to locate the utilities for connection. The installation of the utilities connection box should be performed by a qualified technician.

Please consider the following before beginning:

- The connection box can be installed anywhere in the room within the range of the 6 foot umbilical that will connect the box to the unit. Locate the box where the incoming service lines will not cause an obstruction.
- Air is the only service required unless a heated syringe or lighted handpieces are to be used.
- Waste, vacuum or water lines are not necessary unless separate devices requiring these services are to be used.
- The location of the incoming services on the installation plan are suggestions and can be altered to suit the situation.

3. ELECTRICAL CONNECTIONS TO THE CONNECTION BOX (J BOX)

Figure 2 shows the typical arrangements for the electrical connections. The Accessory Power Chassis (APC) will be present if you have accessories such as a light, fiber optics, etc. The APC allows you to make your connections to a module without complicated wiring procedures. Specialized accessories other than a light will have their own instruction sheet in addition to this installation instruction.

DANGER: Turn off all electrical power at the power source before making primary electrical connections.

RATING FOR 120 VOLT UNIT

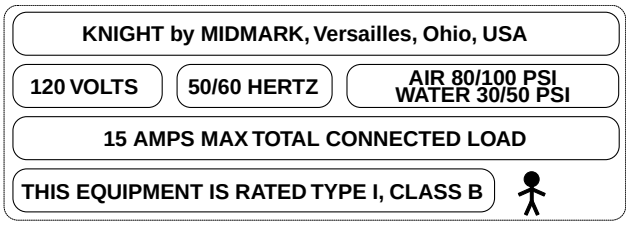
KNIGHT by MIDMARK, Versailles, Ohio, USA
120 VOLTS
50/60 HERTZ
AIR 80/100 PSI
WATER 30/50 PSI
15 AMPS MAX TOTAL CONNECTED LOAD
THIS EQUIPMENT IS RATED TYPE I, CLASS B

RATING FOR 240 VOLT UNIT

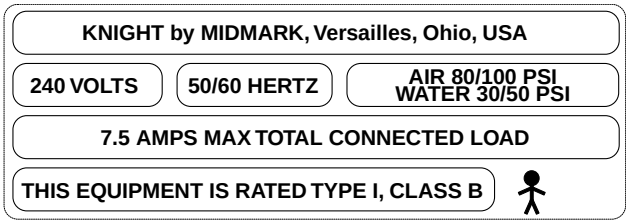
KNIGHT by MIDMARK, Versailles, Ohio, USA
240 VOLTS
50/60 HERTZ
AIR 80/100 PSI
WATER 30/50 PSI
7.5 AMPS MAX TOTAL CONNECTED LOAD
THIS EQUIPMENT IS RATED TYPE I, CLASS B

CONFORMS TO UL STD. 544
CERTIFIED TO CAN/CSA - C22.2 NO. 125-M1984

© Midmark Corporation 2001 SF-1789

SECTION II - INSTALLATION

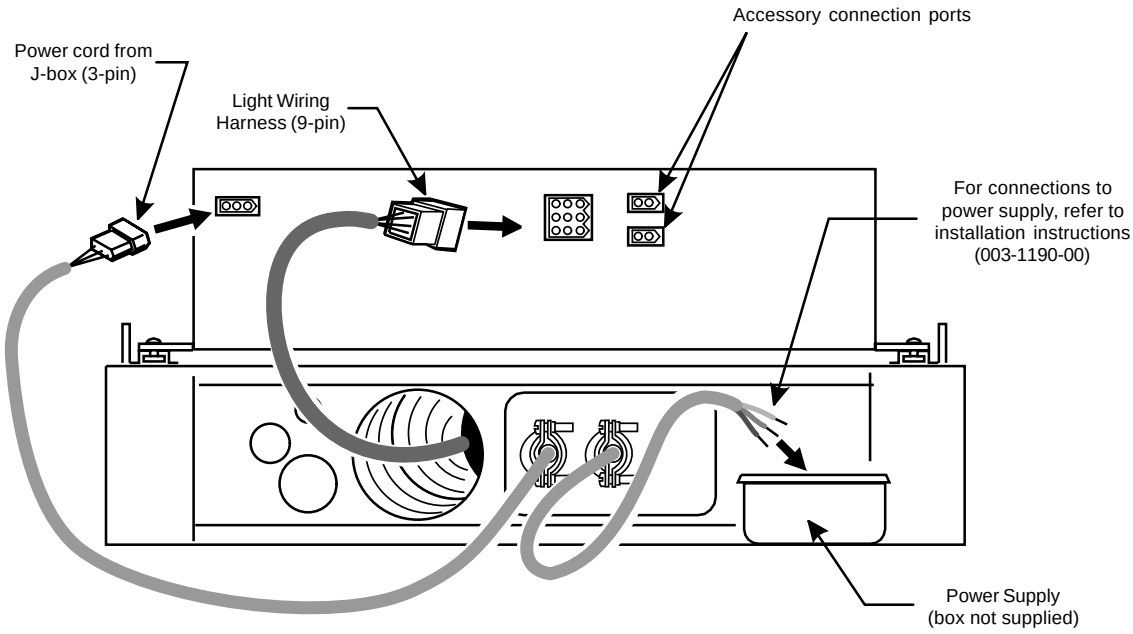
Accessory connection ports
Power cord from J-box (3-pin)
Light Wiring Harness (9-pin)
For connections to power supply, refer to installation instructions (003-1190-00)
Power Supply (box not supplied)

Electrical Connections in J-Box for Units with Accessory Power Chassis (APC)

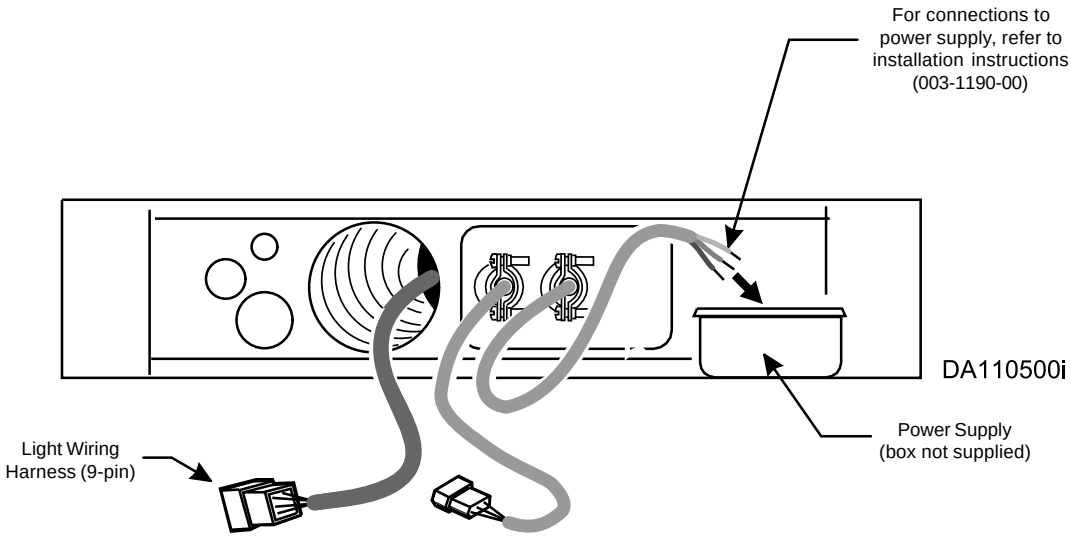
For connections to power supply, refer to installation instructions (003-1190-00)
DA110500i
Power Supply (box not supplied)
Light Wiring Harness (9-pin)

Electrical Connections in J-Box for Units without Accessory Power Chassis (APC)

Figure 2

© Midmark Corporation 2001 SF-1789

SECTION II - INSTALLATION (CONT)

4. INSTALLING THE UNIT

Use the following procedure to mount the unit to the chair:

1. Remove the mounting bracket cover by loosening the four cover screws (See Figure 3).
2. Position the arm assembly on the mounting bracket; then screw the 3/4" bolt and washer into the tapped hole leaving the arm assembly lose enough to adjust the leveling screw.
3. Place a level against the top portion of the unit arm, loosen or tighten the leveling screws to level the arm. Be sure to check the level in all directions by moving the level in all directions around the post.
4. Tighten the 3/4" bolt and check the level again. Repeat the leveling procedure if necessary.

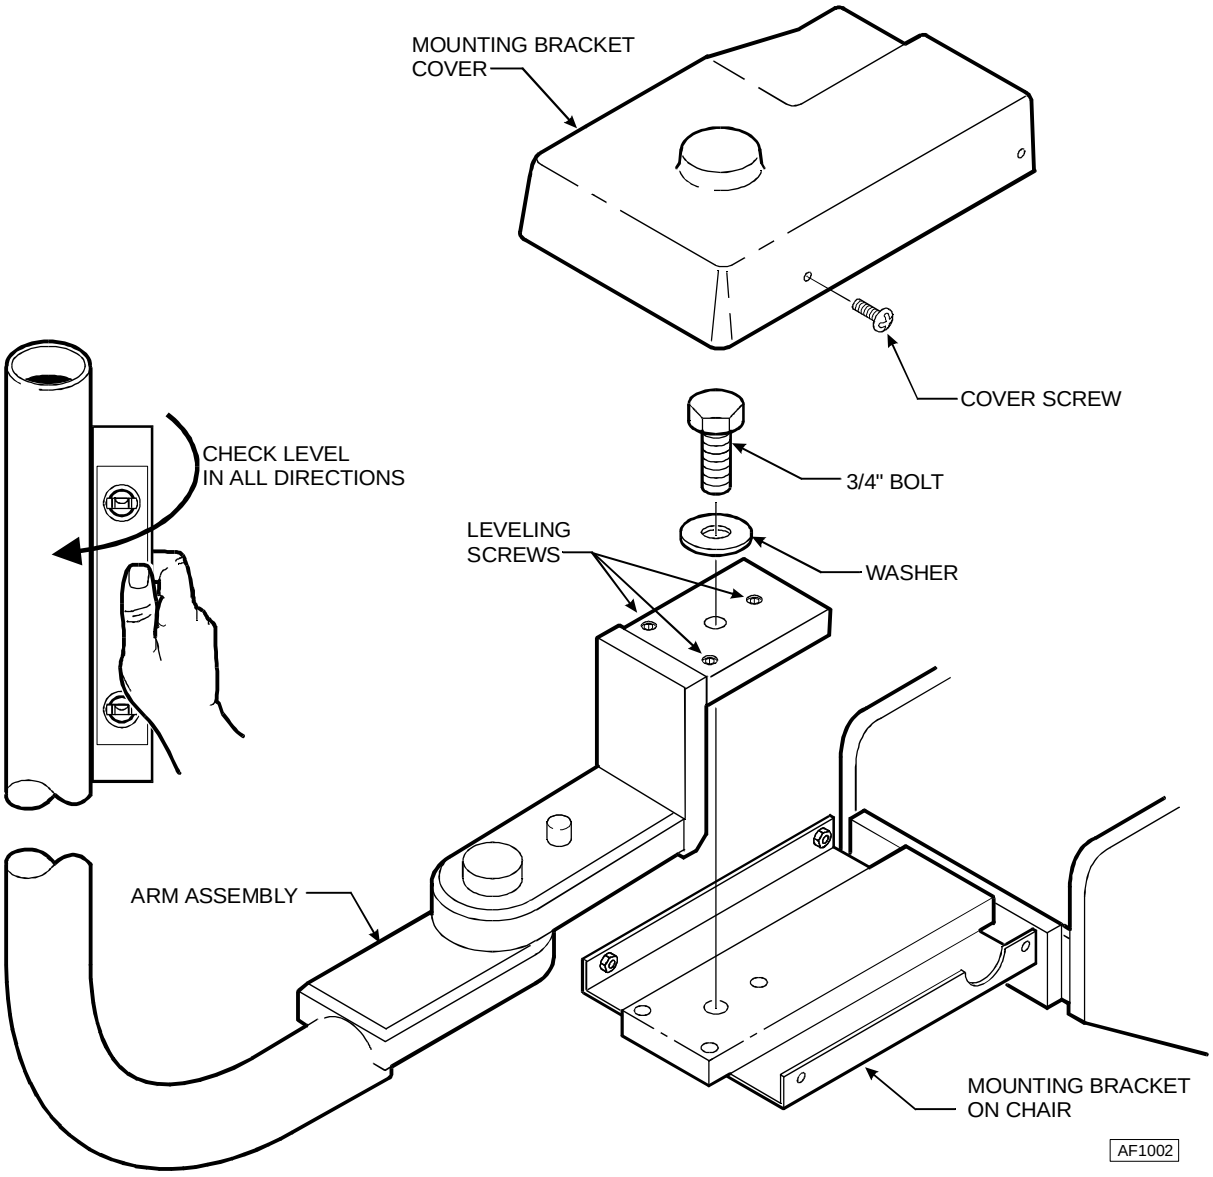

Figure 3

© Midmark Corporation 2001 SF-1789

SECTION II - INSTALLATION (CONT)

5. Carefully remove all packing material from the unit and read all information tags and labels.
6. Slide the umbilical into the “P” clamp with 2” extending beyond the clamp. Tighten the clamp to keep the umbilical from sliding out when the unit arm is rotated. (See Figure 4)
7. Make the tubing and wiring connections as shown in the diagrams (See Figure 5 & 6) and neatly secure with the clips provided. Replace the cover.
8. Check the arm assembly movement by swinging it from one side of the chair to the other. If more or less friction resistance is desired, loosen or tighten the three resistance set screws on the underside of the arm assembly.

WARNING: To avoid personal injury or equipment damage, do not attempt to adjust the bolt. It has been set to manufacturer's specifications.

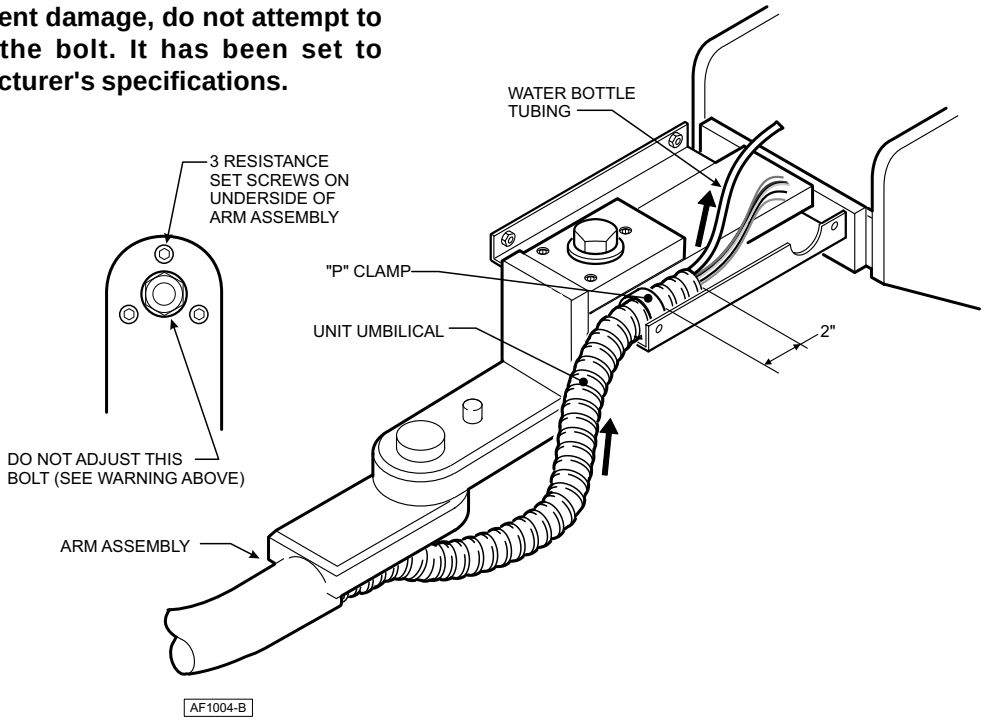

Figure 4

© Midmark Corporation 2001 SF-1789

SECTION II - INSTALLATION (CONT)

5. UMBILICAL TUBING CONNECTIONS

NON-ROTATION CHAIR (INTERNAL UMBILICAL)

Figure 5 shows the connections to be made in the mounting bracket area under the seat of a chair with an internal umbilical. This installation should be performed by a qualified technician.

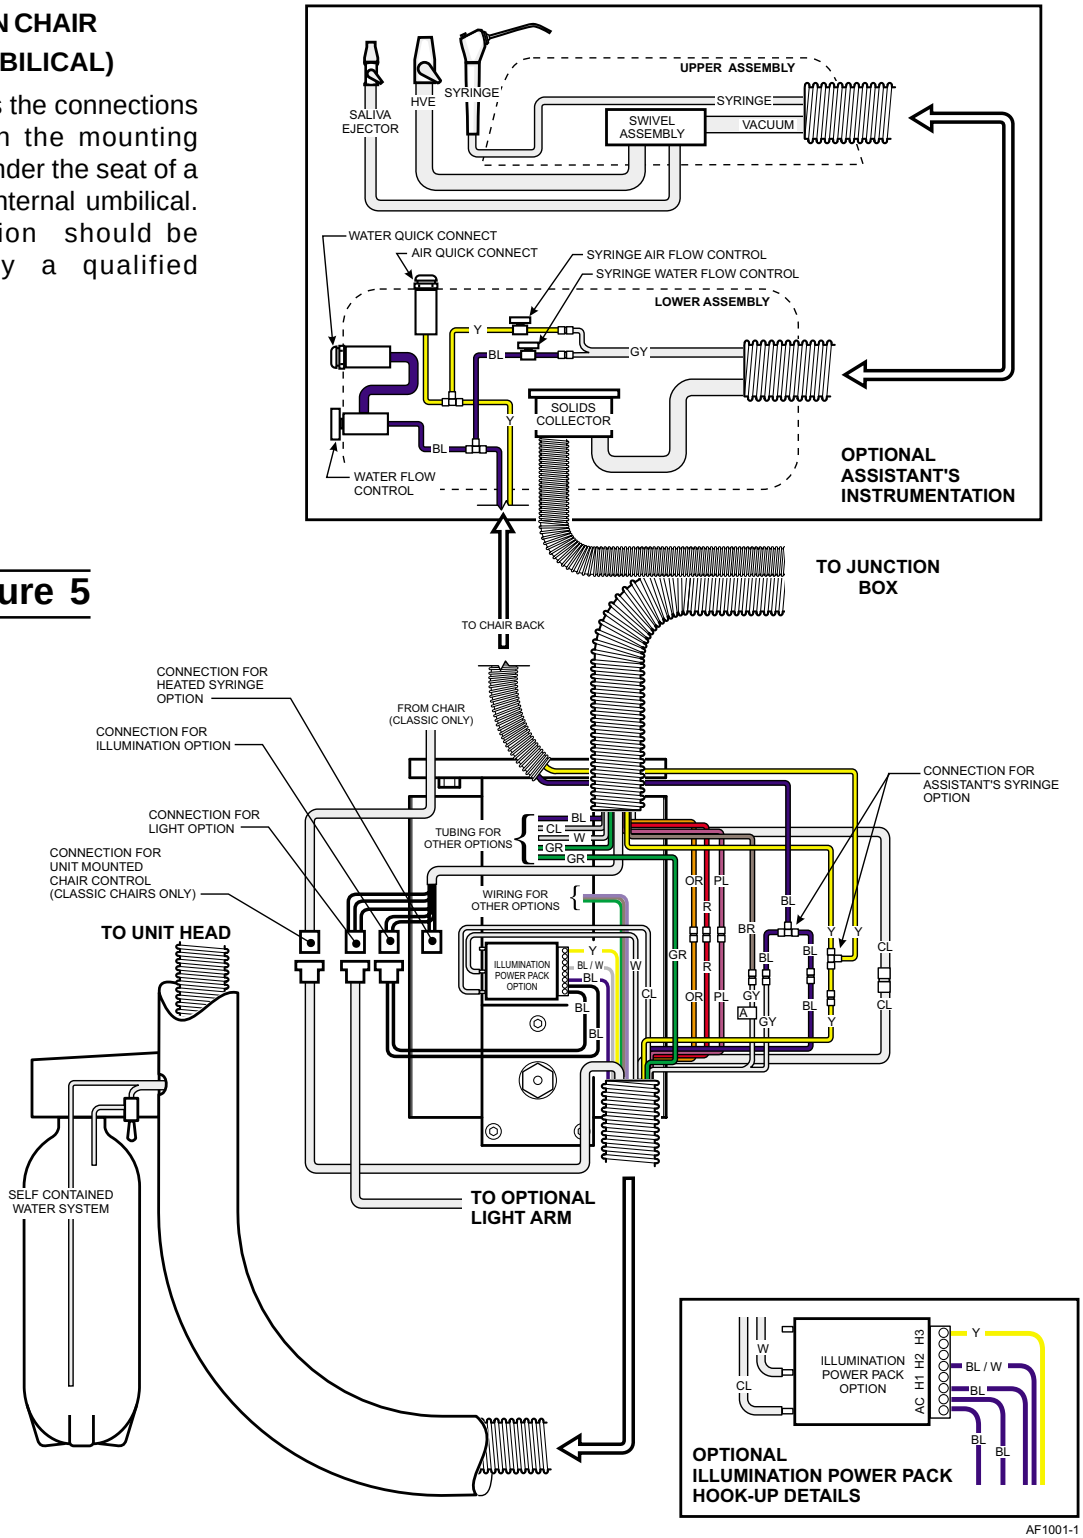

Figure 5

© Midmark Corporation 2001 SF-1789

SECTION II - INSTALLATION (CONT)

6. UMBILICAL TUBING CONNECTIONS

ROTATING CHAIR (EXTERNAL UMBILICAL)

Figure 6 shows the connections to be made in the mounting bracket area under the seat of a chair with an external umbilical. This installation should be performed by a qualified technician.

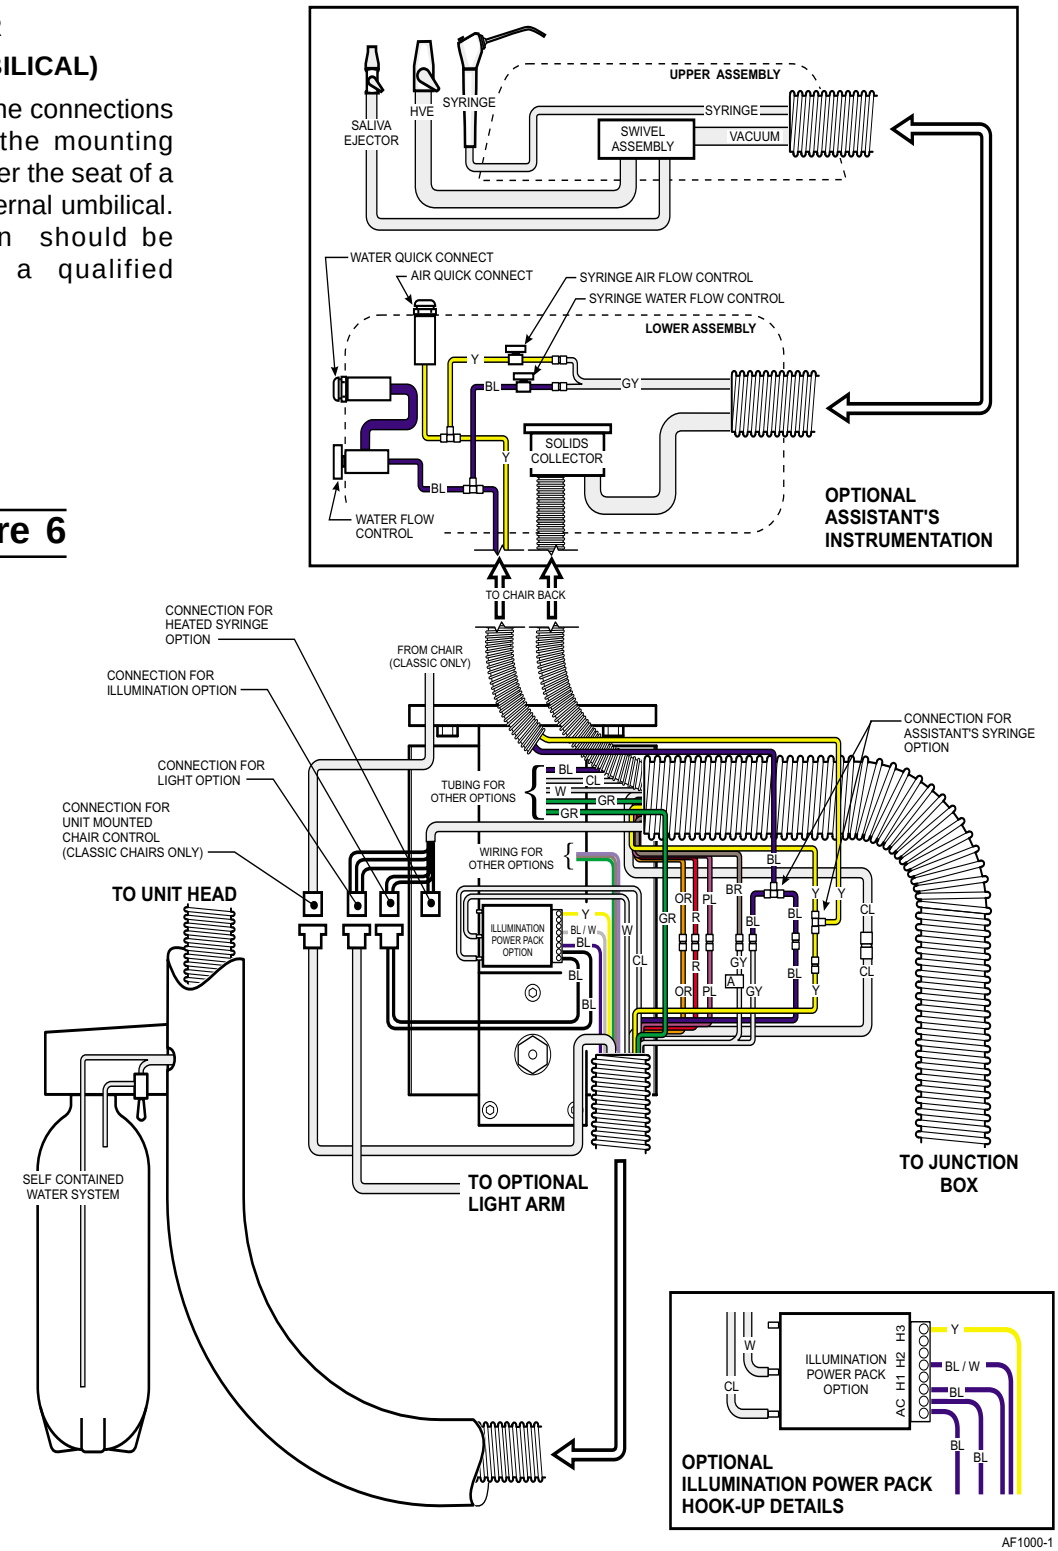

Figure 6

© Midmark Corporation 2001 SF-1789

SECTION II - INSTALLATION (CONT)

7. INSTALLING THE STOP ROTATION PINS

Install the stop rotation pins on the unit arm as follows:

1. Slide the trim ring up (See Figure 7).
2. Install two stop pins.
3. Slide the trim ring down.

CAUTION: The rotation stop pins must be installed to prevent the arm being rotated completely around several times, which could damage internal tubing.

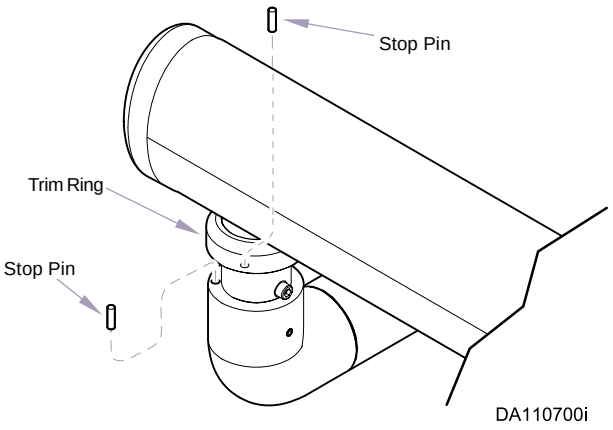

Figure 7

8. PREPARING THE FLEX ARM

The flex arm has a built in locking mechanism controlled by a toggle switch located on the underside of the instrument head. Refer to Figure 8 and use the following procedure to prepare this feature for use:

1. Remove the end cap.
2. Slide the flex arm cover back to expose the interior of the flex arm.
3. Remove the wire tie which will release the lock pawl from the latch block.
4. Check the vertical movement of the flex arm. The flex arm tension is adjusted at the factory and should not require adjustment. However if adjustment is desired, simply tighten the tension nut to increase tension or loosen the tension nut to decrease tension.
5. Slide the flex arm cover into position taking care to position the bottom cover in its track.
6. Replace the end cap.

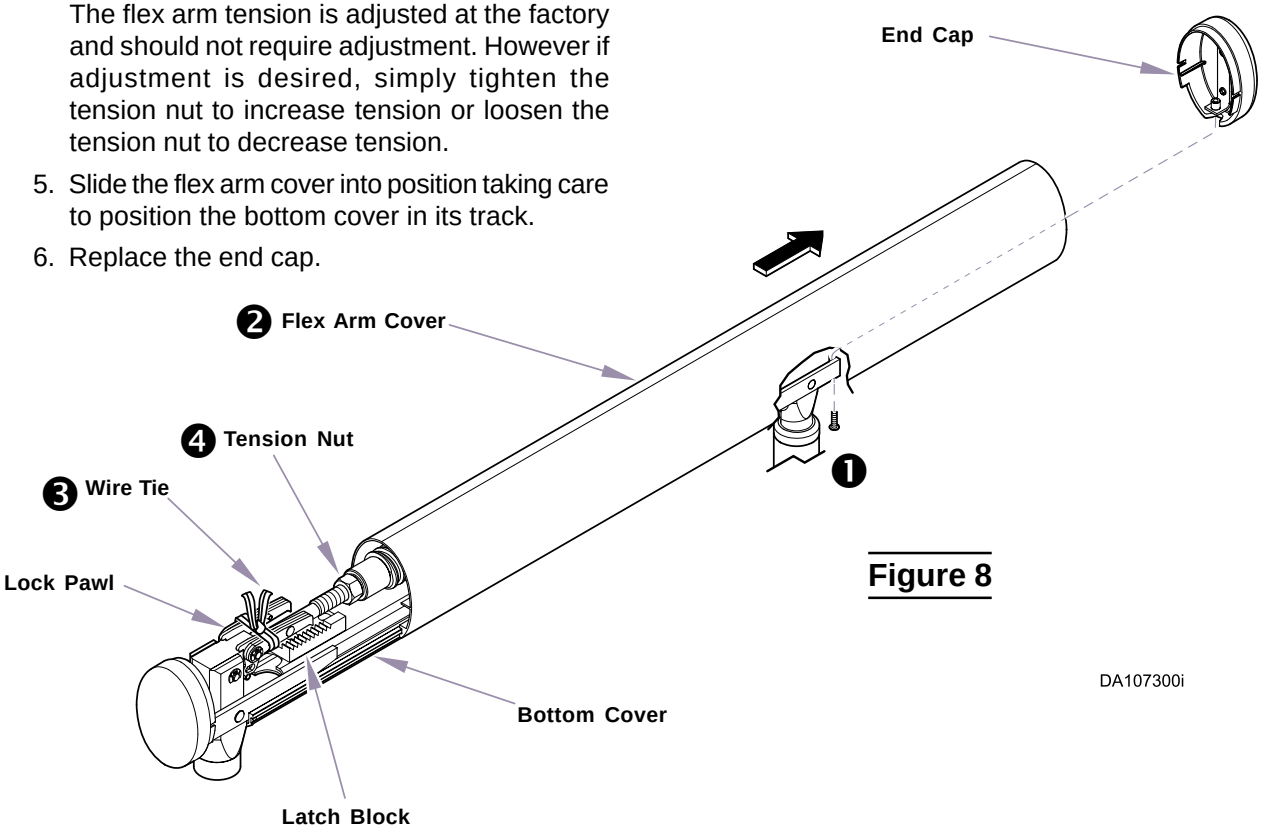

Figure 8

© Midmark Corporation 2001 SF-1789

SECTION II - INSTALLATION (CONT)

9. UMBILICAL TUBING CONNECTIONS TO THE UTILITIES CONNECTION BOX (J BOX)

Figure 9 shows the connections to be made inside the J box. Refer to installation instructions supplied with J-box. They may be used as a template to locate the utilities for connection. The installation should be performed by a qualified technician.

NOTE: Six feet of umbilical is provided. This may be shortened to suit the installation requirements or personal preference.

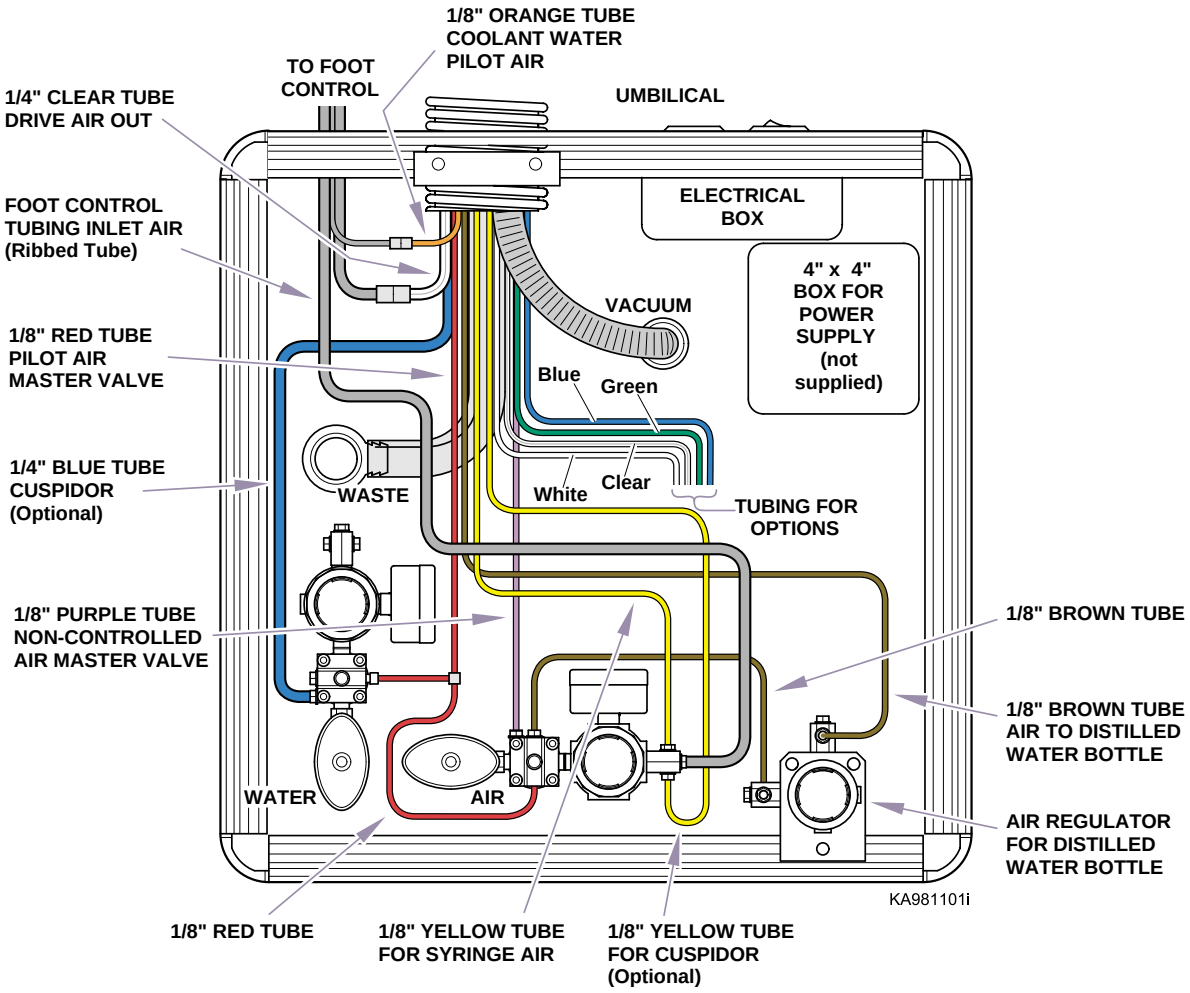

Figure 9

© Midmark Corporation 2001 SF-1789

SECTION III - CONTROLS

1. ASEPSIS 21 HANDPIECE DELIVERY SYSTEM CONTROLS LOCATED UNDER COVER

A complete set of handpiece and syringe adjustments are located directly under the magnetically held cover for protection against contamination. Lift up either back corner of cover for easy removal. All controls are labeled with symbols identifying their function. All control functions are described below. Refer to Figure 10 for locations.

I-2-3 HANDPIECE COOLANT WATER VOLUME
Adjusts the amount of coolant water to corresponding handpiece.

4-5-6 DRIVE AIR PRESSURE SETTING
Adjusts drive air pressure for corresponding handpiece. Use to set maximum handpiece pressure indicated on gage. Refer to handpiece manufacturer's specifications for proper setting.

7- SYRINGE AIR VOLUME ADJUSTMENT
Adjusts the volume of air to the syringe and affects air water spray pattern.

8- SYRINGE WATER VOLUME ADJUSTMENT
Adjusts the volume of water to the syringe and affects water spray pattern.

9- COOLANT AIR VOLUME ADJUSTMENT
Adjusts the volume of coolant delivered to all handpieces. It affects the spray pattern of air and water at the handpiece. If the handpiece has a coolant air connection in the handpiece itself, this adjustment will have no effect and can be completely shut off.

10- HANDPIECE PRESSURE GAGE
Indicates individual handpiece pressure when handpiece is operating.

11-12-13 MAGNETIC LATCHES
These hold the cover in place.

14-HANDPIECE COOLANT WATER FLUSH BUTTON
Controls the coolant water flush valve located on the underside of the delivery head.

Figure 10 ASEPSIS 21 INSTRUMENT HEAD WITH TOP COVER REMOVED

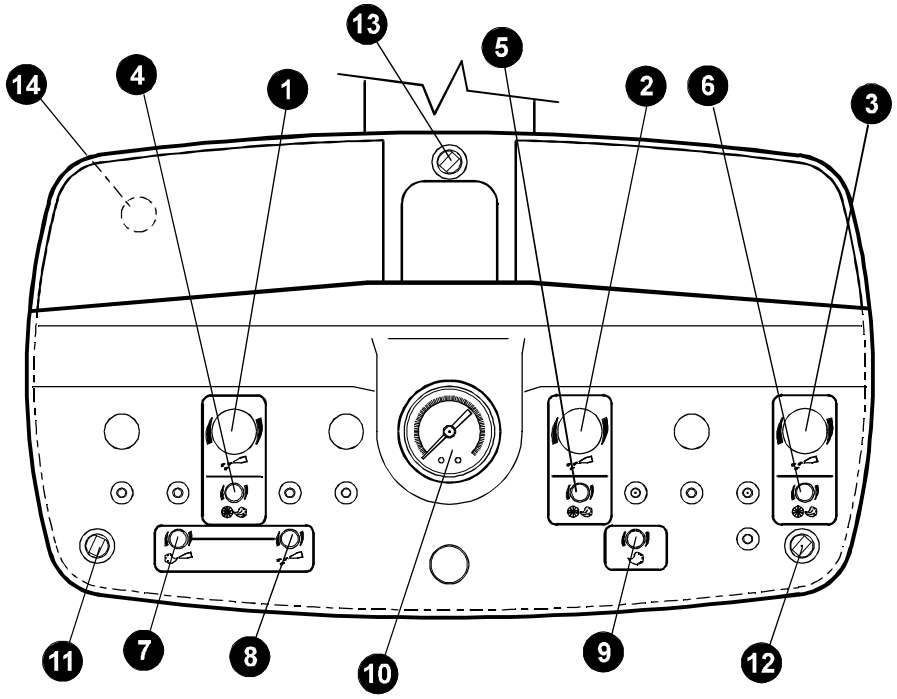

© Midmark Corporation 2001 SF-1789

SECTION III - CONTROLS (CONT)

2. EXTERNAL CONTROLS AND FUNCTIONS

MASTER ON /OFF VALVE

Located on the bottom of the instrument head directly behind the handpiece holder bar support, this two position toggle control turns the main air and water on or off the utilities box. Up position is on.

ARM LOCK

Located on the bottom of the instrument head, this two position toggle controls the arm lock mechanism.

AUTOMATIC HANDPIECE ACTIVATION

The automatic kink valves are designed to permit activation of the selected handpiece when it is removed from its holder. Drive air will be delivered to the selected handpiece when the foot control is depressed.

WET/DRY FOOT CONTROL

The disc-type foot control operates the selected handpiece at varying speeds depending upon the foot pressure applied to the disc. Positioning the coolant water selector toggle allows coolant water for wet cutting to be selected by the motion of the foot. Applying foot pressure to the disc will operate the selected handpiece and water spray if turned on.

WATER ON/OFF VALVE

Located on the foot control, this switch provides water for coolant spray to the handpiece when the switch is moved forward to the “On” position (toward blue dot) and the foot control is depressed (wet cutting). When the valve is in the "Off" position, water will not be delivered to any handpiece.

© Midmark Corporation 2001 SF-1789

SECTION IV - PURGING AND TESTING THE SYSTEM

When the installation is complete you should purge the system to clear the tubing of any foreign material and to purge the air out of the water tubing. This also serves to test the equipment for proper function.

1. Before attaching the handpieces, turn on the air, water and vacuum to the utilities connection box.
2. Open the shut-off valves in the utilities connection box.
3. Fill the water bottle with distilled water.
4. Turn on the master valve lever on the Asepsis 21 head.
5. Lift the cover off the Asepsis 21 head and turn the coolant water and coolant air volume controls adjustment knobs completely open.
6. Remove a handpiece hose from its holder.
7. Depress the foot control to operate the coolant water and drive air for 30 seconds.
8. Depress the coolant water flush button on the underside of the Asepsis 21 head to allow the water to flow for 30 seconds.
9. Repeat this procedure with each handpiece hose.
10. Operate the air and water for both doctor and assistant's syringes for 30 seconds.
11. Install the handpieces.
12. Set the coolant water and coolant air volume controls to the desired position.

SECTION V - FINAL CHECK LIST

When all the assembly and installation procedures are completed, the unit should be checked out in accordance with the following check list to ensure that assembly is complete and that all controls function properly.

☐ Check complete system for any air or water leaks.

☐ Check to make sure there is proper air and water flow to the handpieces.

☐ Check the drive air pressure for the handpiece being used to make sure it is set correctly.

☐ Check the syringes for proper function and water flow.

☐ Be sure the person who will operate the unit receives the Operator's Manual and any other appropriate information or instructions.

☐ If any optional equipment has been installed, make sure it is properly installed and functioning as intended.

© Midmark Corporation 2001 SF-1789

Return To Table Of Contents

Return To Table Of Contents

DECLARATION OF CONFORMITY

MIDMARK CORPORATION

Midmark Corporation declares that SW and S-21 Dental Units conforms to the applicable requirements of the Medical Device Directive 93/42/EEC, Annex V and VII.

Serial Numbers: UA1278, UW01032, UC0971, and UK0148 to present.

Authorized Representative
Promotal
22 Rue De St. Denis
53500 Ernee
France

Notified Body
LRQA Limited
Hiramford
Middlemarch Office Village
Siskin Drive
Coventry CV3 4FJ
England

Certificate #: 961351/B

Quality Assurance Manager

Gene Harshbager
Midmark Corporation
60 Vista Drive PO Box 286
Versailles, OH 45380 U.S.A.
October 18, 1999

TPW1768 Rev. C (12/00)

KA940600

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542